

# Unshielded Patch Panel Installing Instruction

PT、PA series



**180° Angle Type** (12、16、24、32、48、72、96port)



**45° Angle Type** (12、16、24、32、48、72、96port)

**2**

**IDC ( 3 options )**



110D Type


KRONE Type

110D & KRONE IDC compatible.

Color Coding Information

T568A	T568B
Pin 5 White/Blue	Pin 5 White/Blue
Pin 4 Blue	Pin 4 Blue
Pin 1 White/Green	Pin 1 White/Orange
Pin 2 Green	Pin 2 Orange
Pin 3 White/Orange	Pin 3 White/Green
Pin 6 Orange	Pin 6 Green
Pin 7 White/Brown	Pin 7 White/Brown
Pin 8 Brown	Pin 8 Brown

**3**

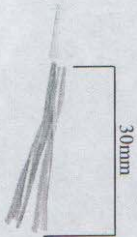

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.


**4**



Cut outside

Follow the IDC color coding to position T568A or T568B wiring.  
Use the impact tool to crimp and connect the wires.

**5**

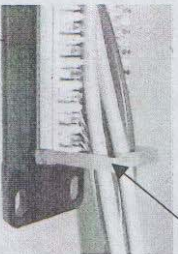

Cable Holder

Use the Cable-Holder to manage these cables, then complete the installation.