


Unshielded Patch Panel Installing Instruction

PT、PA series

1



180° Angle Type (12·16·24·32·48·72·96port)

2

IDC (3 options)



110D Type



KRONE Type




110D & KRONE IDC compatible.

Color Coding Information


T568A	T568B
Pin 5 White/Blue	Pin 5 White/Blue
Pin 4 Blue	Pin 4 Blue
Pin 1 White/Green	Pin 1 White/Orange
Pin 2 Green	Pin 2 Orange
Pin 3 White/Orange	Pin 3 White/Green
Pin 6 Orange	Pin 6 Green
Pin 7 White/Brown	Pin 7 White/Brown
Pin 8 Brown	Pin 8 Brown

3



Strip approximately 30mm of the cable jacket, and separate to 4 pair each.


4

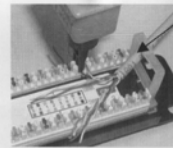

Cut outside

Follow the IDC color coding to position T568A or T568B wiring.
Use the impact tool to crimp and connect the wires.

5

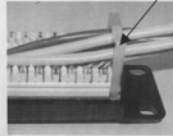

Cable Holder

Use the Cable-Holder to manage these cables, then complete the installation.