


# Keystone Jack Installing Instruction

KJ8 series

**1**

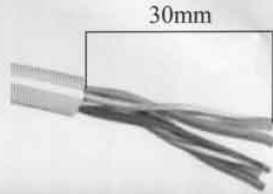

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.

**2**


**T568A**

- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown

**T568B**


- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Orange
- Pin 2 Orange
- Pin 3 White/Green
- Pin 6 Green
- Pin 7 White/Brown
- Pin 8 Brown

**3**

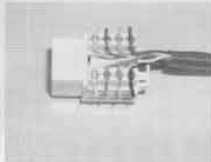


Follow the direction on the color-coding sticker to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.

**4**

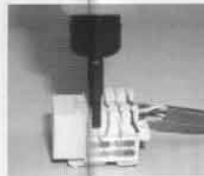

Use 110 or KRONE impact tool to press and cut off each conductor.

**5**

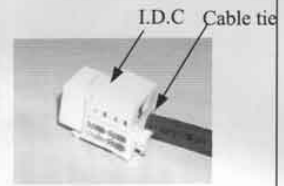

Insert the IDC cap to fix these wires.  
Insert the cable tie to tight up the cable jacket and complete the installation.

**3**




Slide the cable jacket into Cable Holder.

**4**



Follow the direction on the color coding sticker to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.  
Use 110 or KRONE impact tool to press and cut off each conductor.

**5**

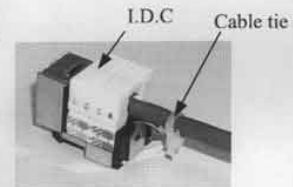


Insert the cable tie to tight up the cable jacket.  
Insert the IDC cap to fix these wires.

**6**



Cover the Full shield, then complete the installation.

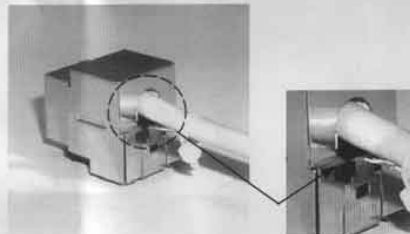

(Note: Full shield has to insert into this plastic slot)