



NAS SERVER FOR EXTERNAL HDD



Quick Installation Guide
DN-70230

System requirement


Operating system and software: Windows 2000, XP, 2003, Vista, Mac OS X or above, Linux

Required hardware resources:


- 10/100 base-TX Auto MDI/MDI-X LAN
- USB 2.0 External HD
- USB cable

Hardware installation

Connecting the NAS Adapter:

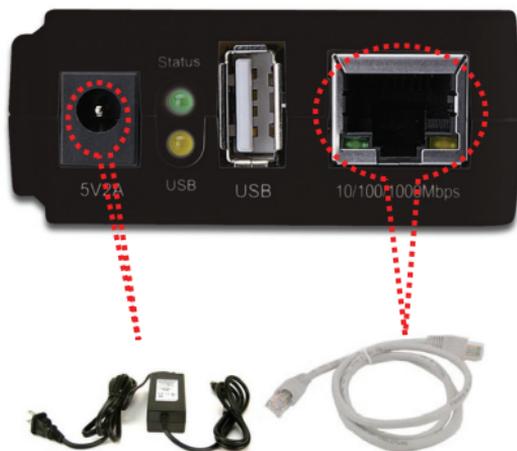

1. Turn off power of the external HD enclosure.
2. Connect the external HD enclosure to the USB port of the rear of the NAS adapter.
3. Turn on power of the external HD enclosure.
4. Connect the AC power adapter cord to the power port to the front of the NAS adapter.
5. Connect the other end of the AC power adapter cord to an electric outlet.
6. Connect the twisted-pair cable to the front of the NAS adapter and the other end of the cable to the router.

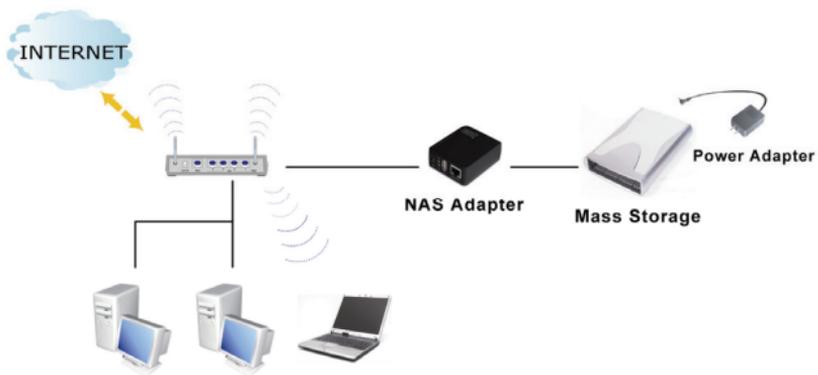

Utility Installation

The utility is used to find the NAS adapter in your network.

Please double click "Utility Installation" to start the installation steps as follow:



Follow the instructions of the setup program to install the utility on your computer.

Managing Your Device

Prepare Your Computer to Connect USB Media Adapter

1. Please make sure your computer supports the JAVA environment. If not, you can go to <http://java.com> to download and install the JAVA software.
2. Double click the **Server Search Tool** to search the NAS adapter from your network environment, and then click **Connect**.



Please enter default username and password: **admin**.



Note:

Please setup the fixed IP after you login the system. Please refer to section "Setup > TCP/IP" for further information.

Status of USB Media Adapter

After logging in, user may find the current system and TCP/IP information by clicking on "Status".

System Information:

It provides system and disk information. System information includes the basic information such as Host Name, Group Name, Firmware version, MAC Address and Date/Time.

Disk Information:

It provides the information of attached HDD such as device name, free size and total size.

Network Storage Series

[Status](#)[Setup](#)[Services](#)[Misc](#)[Restart](#)[System](#)[TCP/IP](#)

This page displays the general system information of the network storage series.

System Information

Host Name :	STORAGE-CDB5
Group Name :	WORKGROUP
Firmware Version :	R3282-1.51c LOADER32 1.17 008E
MAC Address :	00:02:34:12:cd:b5
Date Time :	2009/08/04 15:55:58 GMT 8:00

Disk Information

Disk ID :	SanDisk Cruzer
Free Size :	3833 MB free
Total Size :	3835 MB

TCP/IP Information

TCP/IP provides current TCP/IP settings and information. The Status of DHCP, IP address, Subnet Mask, Gateway, Primary DNS, Secondary DNS setting will be shown here.

Network Storage Series

System TCP/IP

This page displays the current TCP/IP settings of the network storage series.

TCP/IP Settings	
Use DHCP/BOOTP :	OFF
IP Address :	192.168.0.105
Subnet Mask :	255.255.255.0
Gateway :	192.168.0.1
Primary DNS :	192.168.0.1
Secondary DNS :	0.0.0.0

Setup Your USB Media Adapter

Before attaching you external HDD, please check the following items:

1. USB Media Adapter can recognize only the **partition in FAT 32, maximum single file size is 127GB.**
2. If your external HDD is not FAT 32 format, please use the disk utility in "Service > Disk Utility" to format your HDD into FAT 32.
3. If your external HDD contains one FAT 32 partition already, formatting HDD could be unnecessary.

Note: Formatting HDD will cause data lost.

Format your External HDD

Attached and Format your HDD At first Time Setup

Please attach your USB external HDD to the USB port of USB Media Adapter.

Log-in USB Media Adapter and check the "Disk information" in System to see if the external HDD is recognized successfully.

Network Storage Series

[Status](#)[Setup](#)[Services](#)[Misc](#)[Restart](#)[System](#)[TCP/IP](#)

This page displays the general system information of the network storage series.

System Information

Host Name :	STORAGE-CDB5
Group Name :	WORKGROUP
Firmware Version :	R3282-1.51c LOADER32 1.17 008E
MAC Address :	00:02:34:12:cd:b5
Date Time :	2009/08/04 15:55:58 GMT 8:00

Disk Information

Disk ID :	SanDisk Cruzer
Free Size :	3833 MB free
Total Size :	3835 MB

Format your External HDD

If the external HDD is recognized correctly, please go to Services > Disk Utility and click on Format to process. Formatting time depends on the size of the external HDD. It takes 2 to 5 minutes in general.

Network Storage Series

[Status](#) [Setup](#) [Services](#) [Misc](#) [Restart](#)

FTP Server SMB Server BitTorrent Media Server **Disk Utility**

Disk Utility

Format the Disk :

Power-saving mode :

Scan the Disk :

2009/ 8/ 4 16: 5 Scan complete
3 File(s), 15 Dir(s), Used Size=0KB, 0 Error(s)

Format Finished

After finish formatting, a new webpage will be redirected and shows "Format successfully!"

Setting your USB Media Adapter

Before setting your USB Media Adapter, please check the following items:

1. "Group Name", "Subnet Mask", "Gateway" need to be set as the same as your local network. If the setting is different, your USB Media Adapter is not able to be found on local network.
2. Host Name will be shown in "workgroup Computers".
3. **Setting a fixed IP for USB Media Adapter is highly recommended.** The IP of USB Media Adapter **MUST** in the same segment with local LAN. For example, if the local LAN IP is at 192.168.1.x, the IP of USB Media Adapter also has to be 192.168.1.x
(x=available IP from 1 to 253)

System Settings

Host Name: The name you want to be shown in local LAN.

Group Name: The workgroup that you would like to join. By Windows are generally "MSHOME" or "Workgroup"

Tips: You may reference the subnet Mask, Gateway, Primary DNS and secondary DNS setting in your Computer. Those information could be found at Control Panel>Network>TCP/IP

Network Storage Series

[Status](#)[Setup](#)[Services](#)[Misc](#)[Restart](#)

System

TCP/IP

This setup page allows you to configure general system settings of the network storage series.

System Settings

Host Name : (Max 15 characters)
The first character of the host name cannot be the digit (0 to 9).

Group Name : (Max 15 characters)
The first character of the group name cannot be the digit (0 to 9).

[Apply](#)

Date Time Settings

Date : / / (yyyy/mm/dd)

Time : : : (hh:mm:ss) Synchronize from PC

SNTP Settings

SNTP : Auto Disable

Time Server :

Time Zone : Daylight Saving Time, GMT+8

[Apply](#)

Administrator's Password

Account :

Password : (Max 12 characters)

Re-type Password :

[Apply](#)

TCP/IP

TCP/IP Settings

1. Obtain TCP/IP settings automatically: When this option is enabled, USB Media Adapter will use the IP assigned by router. However, this IP may changes from time to time.
2. Use the following TCP/IP settings: Enable this option will allow user to setup a fixed IP, Subnet Mask, Gateway, Primary DNS and Secondary DNS. You may reference the setting in Control Panel>Network>TCP/IP.

Network Storage Series

[Status](#)[Setup](#)[Services](#)[Misc](#)[Restart](#)

System

TCP/IP

This setup page allows you to configure TCP/IP settings of the network storage series.

TCP/IP Settings

- Obtain TCP/IP settings automatically (use DHCP/BOOTP)
- Use the following TCP/IP settings

IP Address :	<input type="text" value="192.168.0.105"/>
Subnet Mask :	<input type="text" value="255.255.255.0"/>
Gateway :	<input type="text" value="192.168.0.1"/>
Primary DNS :	<input type="text" value="192.168.0.1"/>
Secondary DNS :	<input type="text" value="0.0.0.0"/>

[Save & Restart](#)

Setup SMB Server

SMB Server:

Enable SMB service let the user to read or read/write files in local network

The screenshot shows the 'Network Storage Series' configuration page. At the top, there are buttons for 'Status', 'Setup', 'Services', 'Misc', and 'Restart'. Below these are tabs for 'FTP Server', 'SMB Server', 'BitTorrent', 'Media Server', and 'Disk Utility'. The 'SMB Server' tab is active, showing a table of accounts. The table has columns for '[User Name]', '[Password]', '[Access]', and '[Enabled/Disabled]'. One account is listed: 'Guest' with a password of '-----', 'RW' access, and 'ENABLED' status. Above the table are buttons for 'New', 'Modify', 'Enable/Disable', and 'Delete'.

[User Name]	[Password]	[Access]	[Enabled/Disabled]
Guest	-----	RW	ENABLED

Create, modify, enable, disable and delete a SMB account.

Create a SMB account: Click on "New", the browser will bring up a "SMB New Account" windows. Type an account name and password. You may also choose the "Access Right" for the added account, it could be "Read only" or "Read/Write". **After a new SMB account created, a default folder will be created; name of the folder is the same as account name.**

The screenshot shows a browser window with the URL 'http://192.168.1.97/smb_new.htm'. The page title is 'SMB New Account'. It contains a form with the following fields:

- Account Name :** Input field with 'smb' entered. (Max 12 characters)
- Password :** Input field with '••••' entered. (Max 12 characters)
- Access Right :** Radio buttons for 'Read Only' and 'Read/Write'. 'Read/Write' is selected.

At the bottom of the form are 'Add' and 'Cancel' buttons.

Modify a SMB account: Click on "Modify", the browser will bring up a "Modify SMB Account" window. Here you may change the pass word and the read/write attribute of selected account. Also, you may change the folder name by renaming it. In "Sharing List", you may decide which folder you would allow the user to browse and write.

Modify SMB Account

Account Name :

Password : (Max 12 characters)

Access Right : Read Only Read/Write

Folder List

PUBLIC
BT
chris
test
smb

Sharing List

smb


Enable/Disable: This function allows the administrator temporary stop the SMB service to certain account.

Delete: To delete the SMB user account.

Login SMB server:

After setting a SMB account, user may go to My Network Places>View Group computers to find the SMB server. The server name is the same as the "Host name" in system setup.

Click on the server and the system will pop up a login window. Please enter your account name and password.

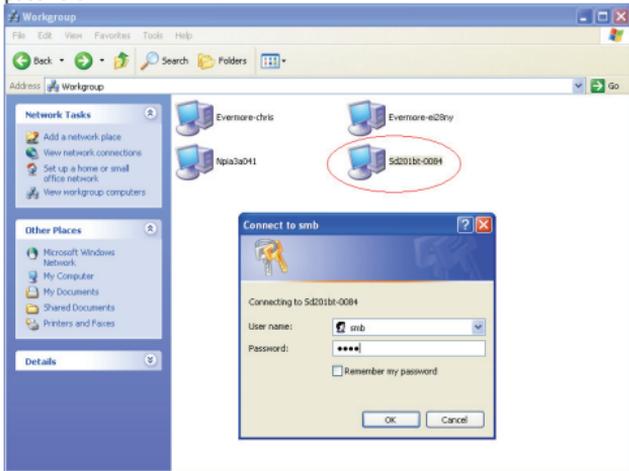

If the user name and password are correct, you may login successfully and the accessible folders will be shown.

